




Heavy Duty Flap Valve

SHDF30&40 Metallic Pumps • Aluminum

Assembly, Installation and Operation Manual

Design Level 1

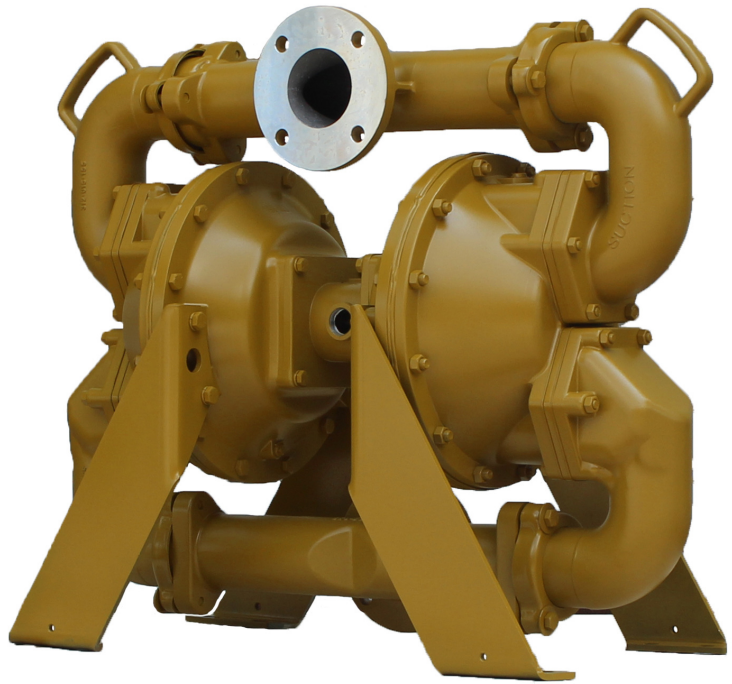

1: PUMP SPECS

2: INSTAL & OP

3: EXP VIEW

REV 0

SHIFT PUMP

Safety Information

⚠ IMPORTANT



Read the safety warnings and instructions in this manual before pump installation and start-up. Failure to comply with the recommendations stated in this manual could damage the pump and void factory.



When the pump is used for materials that tend to settle out or solidify, the pump should be flushed after each use to prevent damage. In freezing temperatures the pump should be completely drained between uses.

⚠ CAUTION



Before pump operation, inspect all fasteners for loosening caused by gasket creep. Retighten loose fasteners to prevent leakage. Follow recommended torques stated in this manual.



Nonmetallic pumps and plastic components are not UV stabilized. Ultraviolet radiation can damage these parts and negatively affect material properties. Do not expose to UV light for extended periods of time.

⚠ WARNING



When used for toxic or aggressive fluids, the pump should always be flushed clean prior to disassembly.



Before maintenance or repair, shut off the compressed air line, bleed the pressure, and disconnect the air line from the pump. Be certain that approved eye protection and protective clothing are worn at all times. Failure to follow these recommendations may result in serious injury or death.



Airborne particles and loud noise hazards. Wear eye and ear protection.



In the event of diaphragm rupture, pumped material may enter the air end of the pump, and be discharged into the atmosphere. If pumping a product that is hazardous or toxic, the air exhaust must be piped to an appropriate area for safe containment.



Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers and other miscellaneous equipment must be properly grounded.



This pump is pressurized internally with air pressure during operation. Make certain that all fasteners and piping connections are in good condition and are reinstalled properly during reassembly.



Use safe practices when lifting

Explanation of Pump Nomenclature

Your Model #:

(fill in from pump nameplate)

SHDF

Pump Brand	Pump Size	Design Level	Wetted Material	Non-Wetted Material	Diaphragm/ Flap Valve	Check Valve Pad	Porting Options	Muffler Options
------------	-----------	--------------	-----------------	---------------------	-----------------------	-----------------	-----------------	-----------------

Model #: **SHDF XX XX X X X X X X**

1: PUMP SPECS

Pump Brand

SHDF Shift Pump (Heavy Duty Flap)

Non-Wetted Material

A Aluminum

Check Valve Pad

B Nitrile

E EPDM

N Neoprene

Pump Size

30 3"

40 4"

Diaphragm / Flap Valve

1 Santoprene

A Neoprene - Polyurethane

B Nitrile

E EPDM

H Hytrel

J Santoprene - EPDM

K Neoprene - Hytrel

N Neoprene

U Polyurethane

Design Level

01 Design Level

Porting Options

A ANSI Flange

Wetted Material

A Aluminum

Muffler Options

6 Metal Muffler

Record the model number and serial number below for future reference. This is important information when ordering replacement parts or when technical assistance is required.


Your Pump Model #: _____

Your Serial #: _____

Performance

SHDF30&40 METALLIC

1: PUMP SPECS

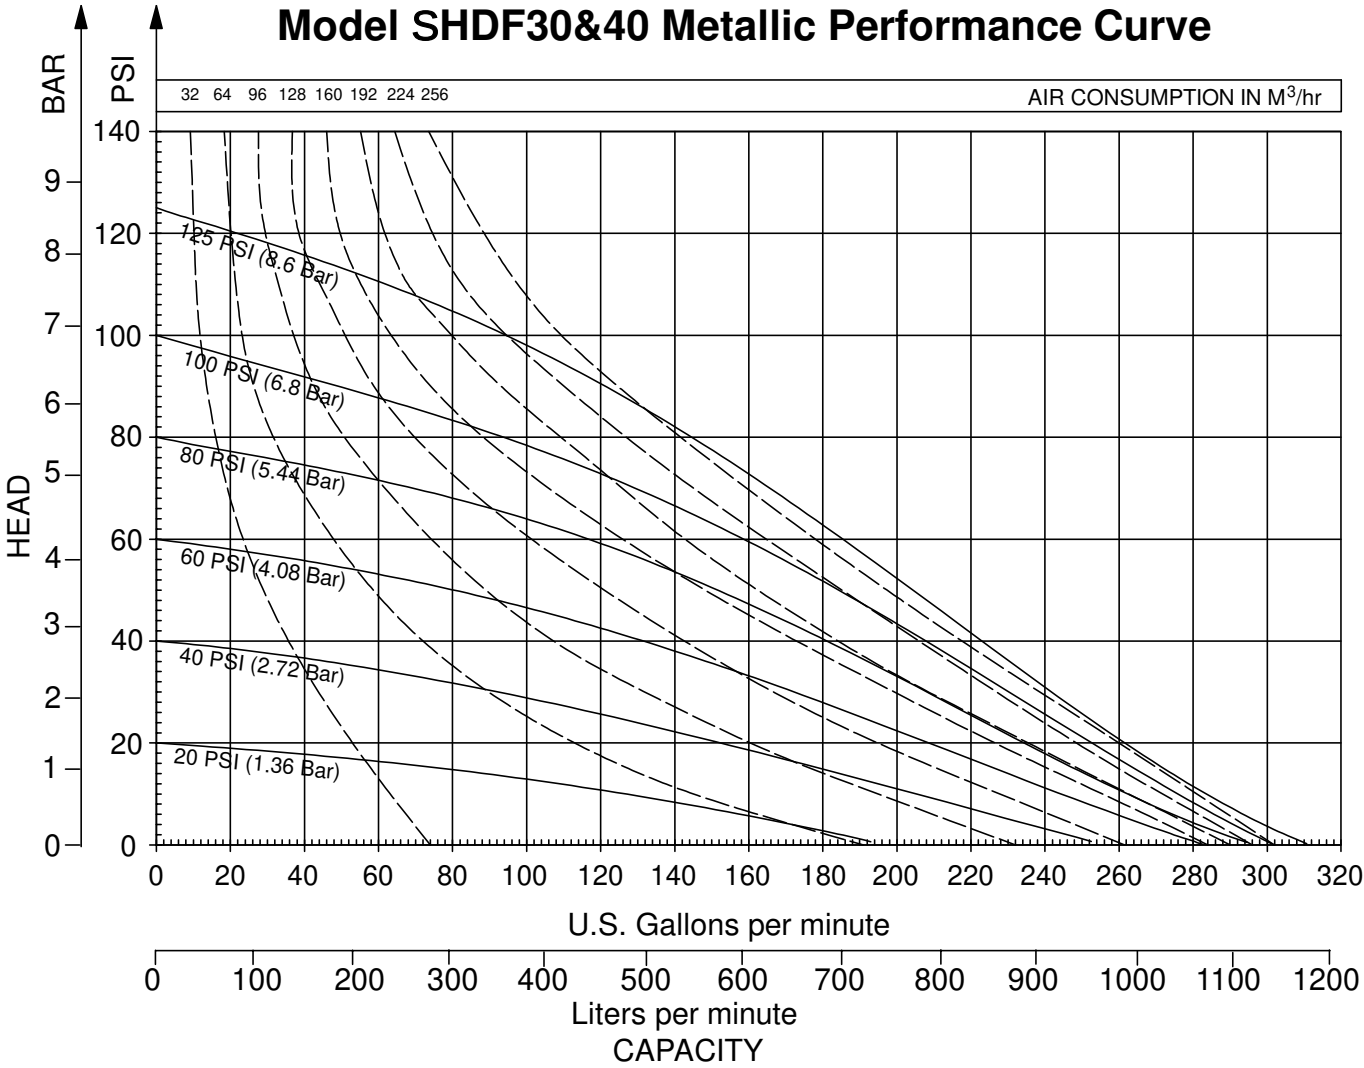

SUCTION/DISCHARGE PORT SIZE

- 3" ANSI Flange
- 4" ANSI Flange

CAPACITY

- 0 to 311 gallons per minute
(0 to 1176 liters per minute)

AIR DISTRIBUTION VALVE

- No-lube, no-stall design

SOLIDS-HANDLING

- Up to 3 in. (75mm)

HEADS UP TO

- 125 psi or 289 ft. of water
(8.8 kg/cm² or 88 meters)

DISPLACEMENT/STROKE

- 1.6 Gallon / 6.08 liter

MAX OPERATING PRESSURE

- 125 psi (8.6 bar)

SHIPPING WEIGHT

- Aluminum 335 lbs. (152kg) - HDF30
- Aluminum 408 lbs. (185kg) - HDF40

Materials

Material Profile:	Operating Temperatures:	
	Max.	Min.
⚠ CAUTION! Operating temperature limitations are as follows:		
Conductive Acetal: Tough, impact resistant, ductile. Good abrasion resistance and low friction surface. Generally inert, with good chemical resistance except for strong acids and oxidizing agents.	190°F 88°C	-20°F -29°C
EPDM: Shows very good water and chemical resistance. Has poor resistance to oils and solvents, but is fair in ketones and alcohols.	280°F 138°C	-40°F -40°C
FKM: (Fluorocarbon) Shows good resistance to a wide range of oils and solvents; especially all aliphatic, aromatic and halogenated hydrocarbons, acids, animal and vegetable oils. Hot water or hot aqueous solutions (over 70°F(21°C)) will attack FKM.	350°F 177°C	-40°F -40°C
Hytre: Good on acids, bases, amines and glycols at room temperatures only.	220°F 104°C	-20°F -29°C
Neoprene: All purpose. Resistance to vegetable oils. Generally not affected by moderate chemicals, fats, greases and many oils and solvents. Generally attacked by strong oxidizing acids, ketones, esters and nitro hydrocarbons and chlorinated aromatic hydrocarbons.	200°F 93°C	-10°F -23°C
Nitrile: General purpose, oil-resistant. Shows good solvent, oil, water and hydraulic fluid resistance. Should not be used with highly polar solvents like acetone and MEK, ozone, chlorinated hydrocarbons and nitro hydrocarbons.	190°F 88°C	-10°F -23°C
Nylon: 6/6 High strength and toughness over a wide temperature range. Moderate to good resistance to fuels, oils and chemicals.	180°F 82°C	32°F 0°C
Polypropylene: A thermoplastic polymer. Moderate tensile and flex strength. Resists strong acids and alkali. Attacked by chlorine, fuming nitric acid and other strong oxidizing agents.	180°F 82°C	32°F 0°C
PVDF: (Polyvinylidene Fluoride) A durable fluoroplastic with excellent chemical resistance. Excellent for UV applications. High tensile strength and impact resistance.	250°F 121°C	0°F -18°C
Santoprene: Injection molded thermoplastic elastomer with no fabric layer. Long mechanical flex life. Excellent abrasion resistance.	275°F 135°C	-40°F -40°C
UHMW PE: A thermoplastic that is highly resistant to a broad range of chemicals. Exhibits outstanding abrasion and impact resistance, along with environmental stress-cracking resistance.	180°F 82°C	-35°F -37°C
Urethane: Shows good resistance to abrasives. Has poor resistance to most solvents and oils.	150°F 66°C	32°F 0°C
Virgin PTFE: (PFA/TFE) Chemically inert, virtually impervious. Very few chemicals are known to chemically react with PTFE; molten alkali metals, turbulent liquid or gaseous fluorine and a few fluoro-chemicals such as chlorine trifluoride or oxygen difluoride which readily liberate free fluorine at elevated temperatures.	220°F 104°C	-35°F -37°C
<i>Maximum and Minimum Temperatures are the limits for which these materials can be operated. Temperatures coupled with pressure affect the longevity of diaphragm pump components. Maximum life should not be expected at the extreme limits of the temperature ranges.</i>		
Metals:		
Alloy C: Equal to ASTM494 CW-12M-1 specification for nickel and nickel alloy.		
Stainless Steel: Equal to or exceeding ASTM specification A743 CF-8M for corrosion resistant iron chromium, iron chromium nickel and nickel based alloy castings for general applications. Commonly referred to as 316 Stainless Steel in the pump industry.		
For specific applications, always consult the Chemical Resistance Chart.		

Ambient temperature range: -20°C to +40°C


Process temperature range: -20°C to +80°C for models rated as category 1 equipment
-20°C to +100°C for models rated as category 2 equipment

In addition, the ambient temperature range and the process temperature range do not exceed the operating temperature range of the applied non-metallic parts as listed in the manuals of the pumps.


Dimension Tolerance :±5mm

Dimensional Drawings for SHDF30 Metallic Pumps

1: PUMP SPECS

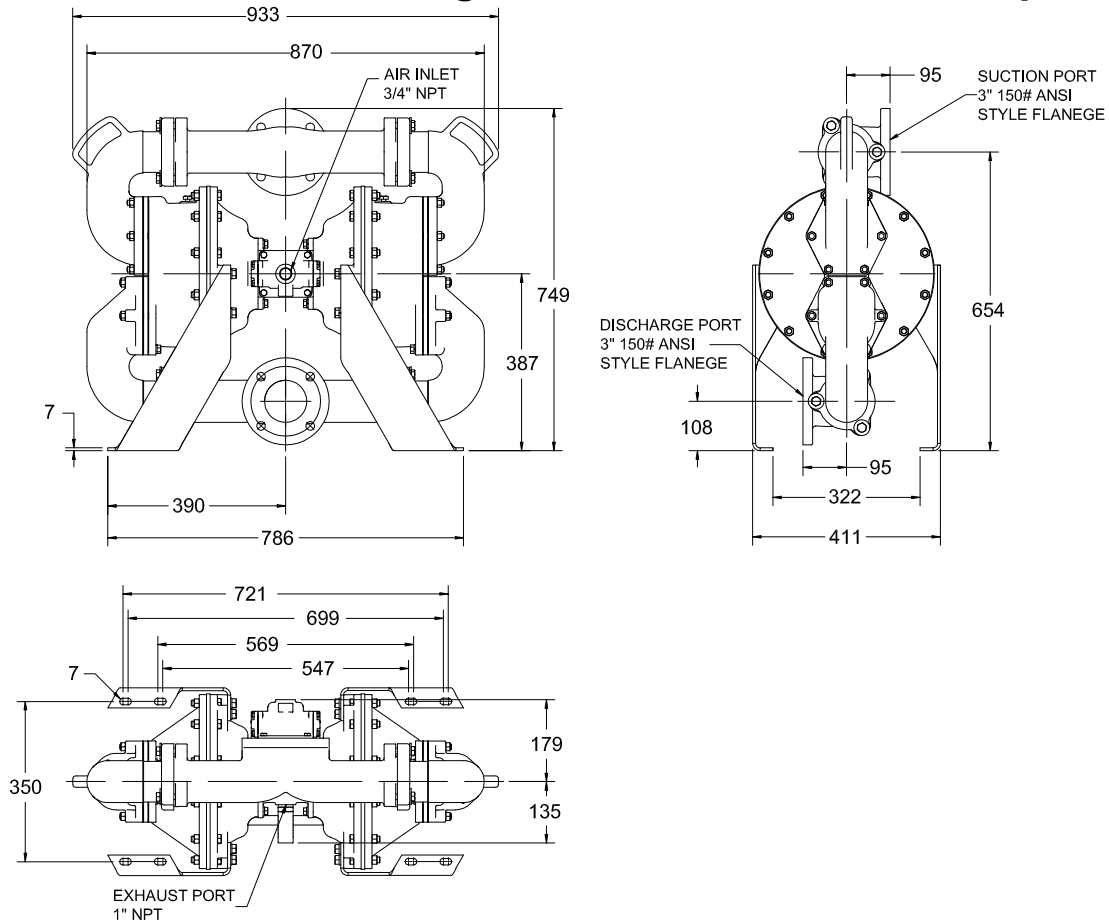

Dimensional Drawings for SHDF40 Metallic Pumps

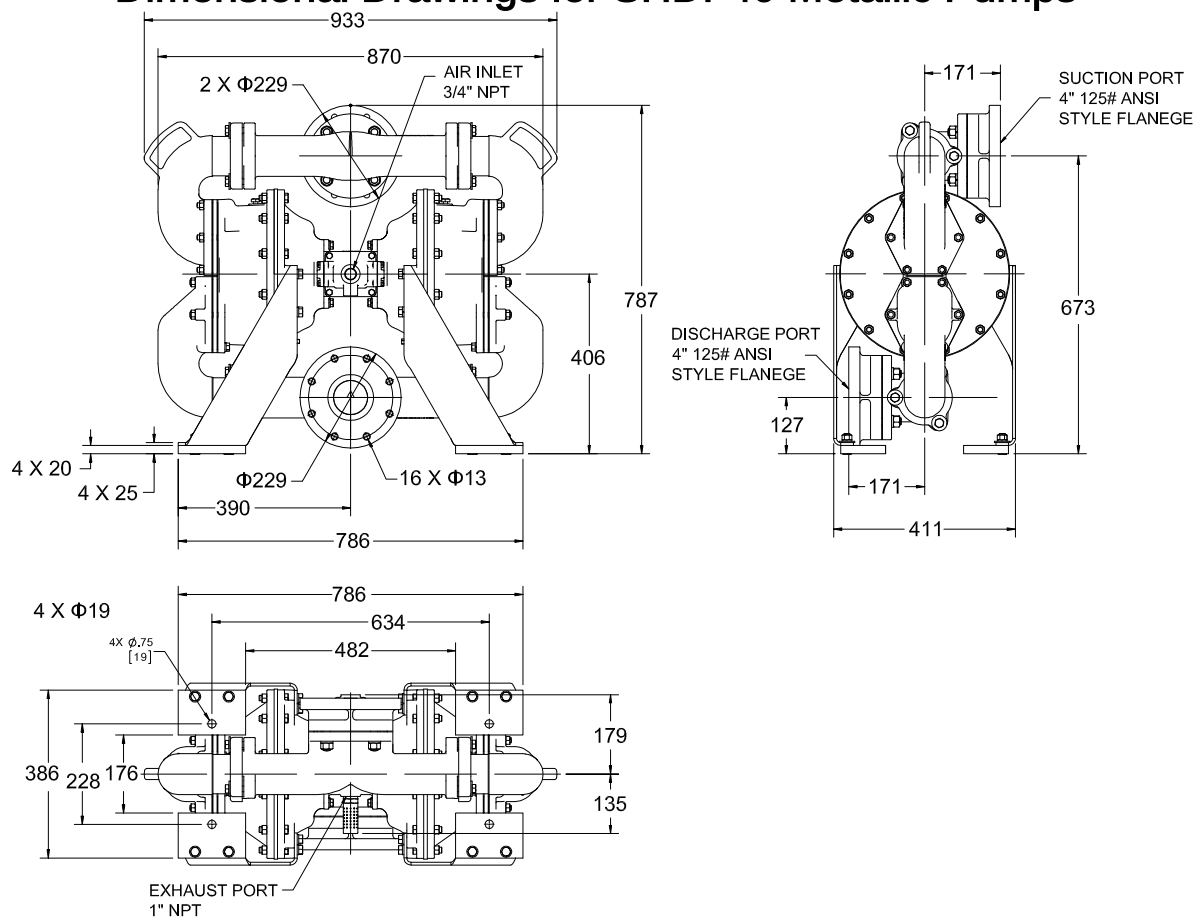

SHDF30&40 METALLIC

Troubleshooting Guide

Symptom:	Potential Cause(s):	Recommendation(s):
Pump Cycles Once	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Air valve or intermediate gaskets installed incorrectly.	Install gaskets with holes properly aligned.
	Bent or missing actuator plunger.	Remove pilot valve and inspect actuator plungers.
Pump Will Not Operate / Cycle	Pump is over lubricated.	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.
	Lack of air (line size, PSI, CFM).	Check the air line size and length, compressor capacity (HP vs. CFM required).
	Check air distribution system.	Disassemble and inspect main air distribution valve, pilot valve and pilot valve actuators.
	Discharge line is blocked or clogged manifolds.	Check for inadvertently closed discharge line valves. Clean discharge manifolds/piping.
	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Blocked air exhaust muffler.	Remove muffler screen, clean or de-ice, and re-install.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
Pump Cycles and Will Not Prime or No Flow	Pump chamber is blocked.	Disassemble and inspect wetted chambers. Remove or flush any obstructions.
	Cavitation on suction side.	Check suction condition (move pump closer to product).
	Check valve obstructed. Valve ball(s) not seating properly or sticking.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket. Clean out around valve ball cage and valve seat area. Replace valve ball or valve seat if damaged. Use heavier valve ball material.
	Valve ball(s) missing (pushed into chamber or manifold).	Worn valve ball or valve seat. Worn fingers in valve ball cage (replace part). Check Chemical Resistance Guide for compatibility.
	Valve ball(s) / seat(s) damaged or attacked by product.	Check Chemical Resistance Guide for compatibility.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.
	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
Pump Cycles Running Sluggish / Stalling, Flow Unsatisfactory	Over lubrication.	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.
	Icing.	Remove muffler screen, de-ice, and re-install. Install a point of use air drier.
	Clogged manifolds.	Clean manifolds to allow proper air flow.
	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Cavitation on suction side.	Check suction (move pump closer to product).
	Lack of air (line size, PSI, CFM).	Check the air line size, length, compressor capacity.
	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Air supply pressure or volume exceeds system hd.	Decrease inlet air (press. and vol.) to the pump. Pump is cavitating the fluid by fast cycling.
	Undersized suction line.	Meet or exceed pump connections.
	Restrictive or undersized air line.	Install a larger air line and connection.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Check valve obstructed.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Entrained air or vapor lock in chamber(s).	Purge chambers through tapped chamber vent plugs. Purging the chambers of air can be dangerous.
Product Leaking Through Exhaust	Diaphragm failure, or diaphragm plates loose.	Replace diaphragms, check for damage and ensure diaphragm plates are tight.
	Diaphragm stretched around center hole or bolt holes.	Check for excessive inlet pressure or air pressure. Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication.
Premature Diaphragm Failure	Cavitation.	Enlarge pipe diameter on suction side of pump.
	Excessive flooded suction pressure.	Move pump closer to product. Raise pump/place pump on top of tank to reduce inlet pressure. Install Back pressure device (Tech bulletin 41r). Add accumulation tank or pulsation dampener.
	Misapplication (chemical/physical incompatibility).	Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication.
	Incorrect diaphragm plates or plates on backwards, installed incorrectly or worn.	Check Operating Manual to check for correct part and installation. Ensure outer plates have not been worn to a sharp edge.
Unbalanced Cycling	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Undersized suction line.	Meet or exceed pump connections.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Check valve obstructed.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Entrained air or vapor lock in chamber(s).	Purge chambers through tapped chamber vent plugs.

Diaphragm Servicing

Step 1: With manifolds and outer chambers removed, remove diaphragm assemblies from diaphragm rod. **DO NOT** use a pipe wrench or similar tool to remove assembly from rod. Flaws in the rod surface may damage bearings and seal. Soft jaws in a vise are recommended to prevent diaphragm rod damage.

Step 1.A: NOTE: Not all inner diaphragm plates are threaded. Some models utilize a through hole in the inner diaphragm plate. If required to separate diaphragm assembly, place assembly in a vise, gripping on the exterior cast diameter of the inner plate. Turn the outer plate clockwise to separate the assembly.

Always inspect diaphragms for wear cracks or chemical attack. Inspect inner and outer plates for deformities, rust scale and wear. Inspect intermediate bearings for elongation and wear. Inspect diaphragm rod for wear or marks.

Clean or repair if appropriate. Replace as required.

Step 2: Reassembly: There are two different types of diaphragm plate assemblies utilized throughout the Shift Pump product line: Outer plate with a threaded stud, diaphragm, and a threaded inner plate.

Outer plate with a threaded stud, diaphragm, and an inner plate with through hole. Secure threaded inner plate in a vise. Ensure that the plates are being installed with the outer radius against the diaphragm.

Step 3: Lightly lubricate, with a compatible material, the inner faces of both outer and inner diaphragm plates when using on non Overlay diaphragms (For EPDM water is recommended). No lubrication is required.

Step 4: Push the threaded outer diaphragm plate through the center hole of the diaphragm. **Note:** Most diaphragms are installed with the natural bulge out towards the fluid side. 05, 07, and 10 non-metallic units are installed with the natural bulge in towards the air side.

Step 5: Thread or place, outer plate stud into the inner plate. For threaded inner plates, use a torque wrench to tighten the assembly together. Torque values are called out on the exploded view.

Repeat procedure for second side assembly. Allow a minimum of 15 minutes to elapse after torquing, then re-torque the assembly to compensate for stress relaxation in the clamped assembly.

Step 6: Thread one assembly onto the diaphragm rod with sealing washer (when used) and bumper.

Step 7: Install diaphragm rod assembly into pump and secure by installing the outer chamber in place and tightening the capscrews.

Step 8: On opposite side of pump, thread the remaining assembly onto the diaphragm rod. Using a torque wrench, tighten the assembly to the diaphragm rod. Align diaphragm through bolt holes, always going forward past the recommended torque. Torque values are called out on the exploded view. **NEVER** reverse to align holes, if alignment cannot be achieved without damage to diaphragm, loosen complete assemblies, rotate diaphragm and reassemble as described above.

Step 9: Complete assembly of entire unit. One Piece Diaphragm Servicing (Bonded PTFE with integral plate) The One Piece diaphragm has a threaded stud installed in the integral plate at the factory. The inner diaphragm plate has a through hole instead of a threaded hole. Place the inner plate over the diaphragm stud and thread the first diaphragm / inner plate onto the diaphragm rod only until the inner plate contacts the rod. Do not tighten. A small amount of grease may be applied between the inner plate and the diaphragm to facilitate assembly. Insert the diaphragm / rod assembly into the pump and install the outer chamber. Turn the pump over and thread the second diaphragm / inner plate onto the diaphragm rod. Turn the diaphragm until the inner plate contacts the rod and hand tighten the assembly. Continue tightening until the bolt holes align with the inner chamber holes. **DO NOT LEAVE THE ASSEMBLY LOOSE**




IMPORTANT



Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory.

Recommended Installation Guide

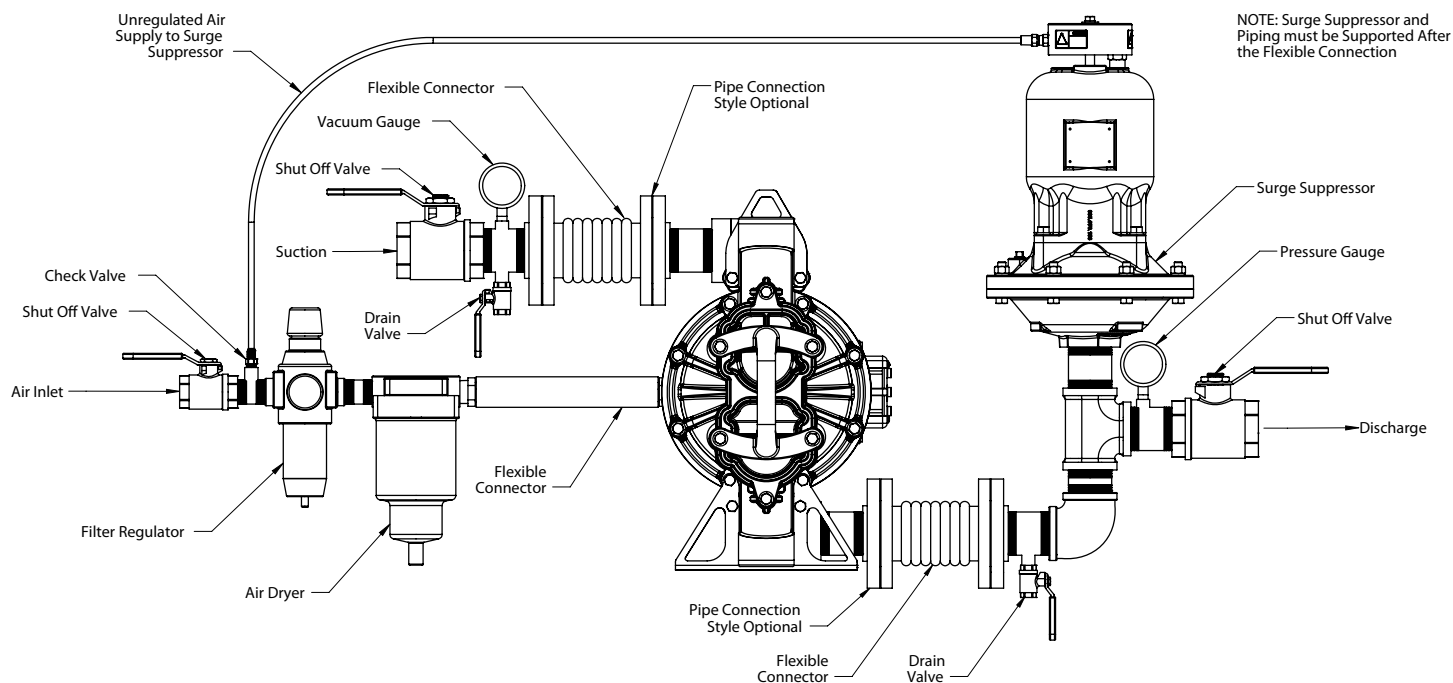

CAUTION



The air exhaust should be piped to an area for safe disposition of the product being pumped, in the event of a diaphragm failure.

Installation And Start-Up

Locate the pump as close to the product being pumped as possible. Keep the suction line length and number of fittings to a minimum. Do not reduce the suction line diameter.

Air Supply

Connect the pump air inlet to an air supply with sufficient capacity and pressure to achieve desired performance. A pressure regulating valve should be installed to insure air supply pressure does not exceed recommended limits.

Air Valve Lubrication

The air distribution system is designed to operate WITHOUT lubrication. This is the standard mode of operation. If lubrication is desired, install an air line lubricator set to deliver one drop of SAE 10 non-detergent oil for every 20 SCFM (9.4 liters/sec.) of air the pump consumes. Consult the Performance Curve to determine air consumption.

Air Line Moisture


Water in the compressed air supply may cause icing or freezing of the exhaust air, causing the pump to cycle erratically or stop operating. Water in the air supply can be reduced by using a point-of-use air dryer.

Air Inlet And Priming

To start the pump, slightly open the air shut-off valve. After the pump primes, the air valve can be opened to increase air flow as desired. If opening the valve increases cycling rate, but does not increase the rate of flow, cavitation has occurred. The valve should be closed slightly to obtain the most efficient air flow to pump flow ratio.

EXPLODED VIEWS FOR SHDF30&40 METALLIC PUMPS

* USED ON HDF4-A ONLY

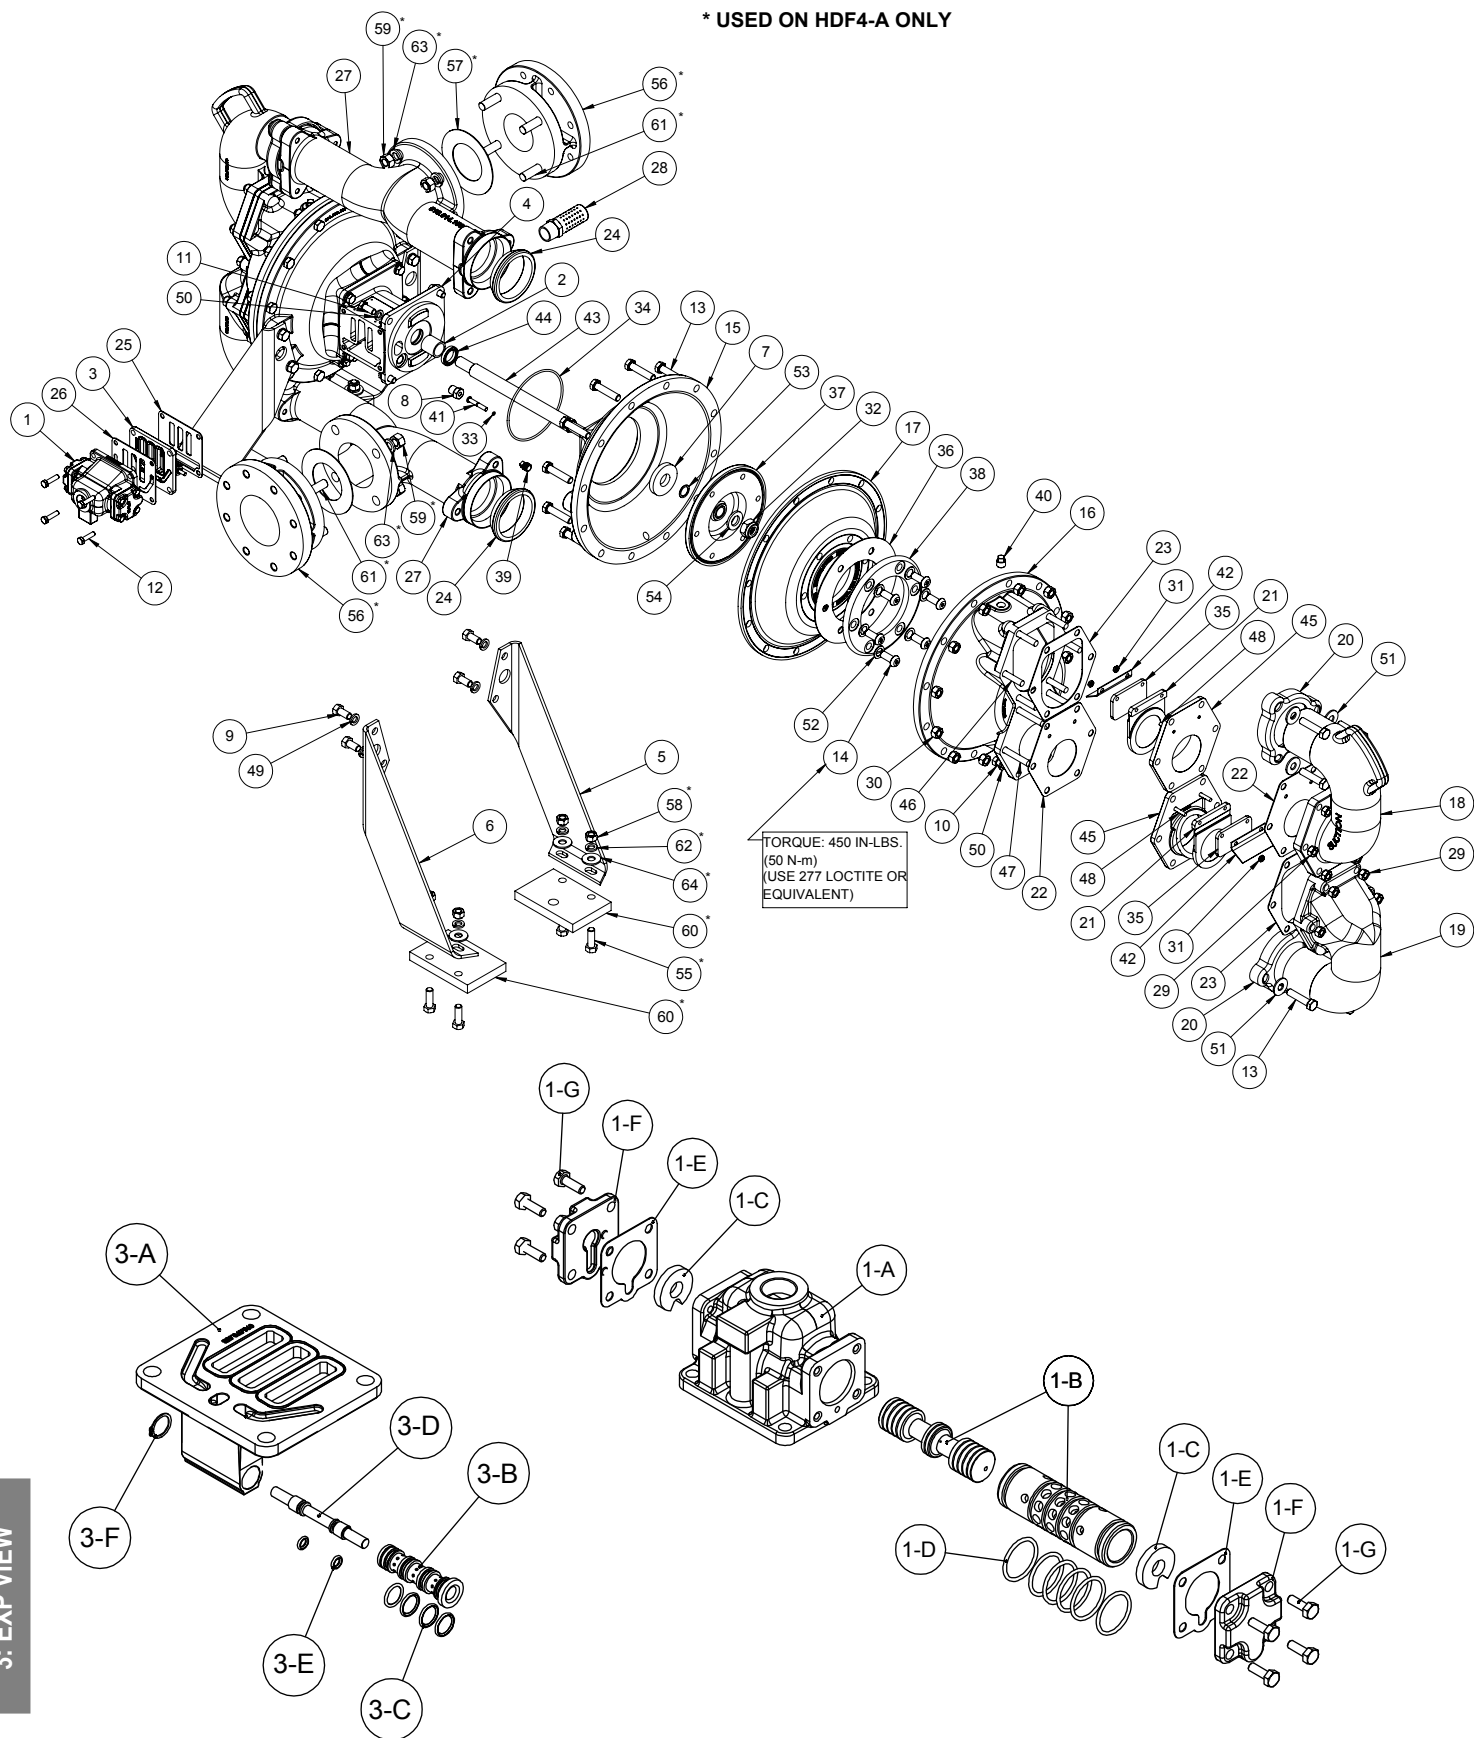

SHDF30&40 Metallic Pump Parts List

S/N	Item	Part Number	Description	Qty	Mtl
1	1	S031.019.156	Air Valve Assembly	1	Aluminum
2	1	S031.019.004	Air Valve Assembly(Alum Center SS/BRASS Sleeve-Spool)	1	Aluminum
3	1-A	S095.043.156	Body, Air Valve	1	Aluminum
4	1-B	S031.012.000	Sleeve and Spool Set	1	Aluminum
5	1-B	S031.012.162	Sleeve and Spool Set	1	Stainless Steel+Brass
6	1-C	S132.014.358	Bumper	2	Urethane Rubber
7	1-D	S560.020.360	O-Ring	6	Nitrile
8	1-E	S360.010.425	Gasket	2	Compressed Fibre
9	1-F	S165.011.157	End Cap	2	Aluminum
10	1-G	S170.032.330	Hex Head Capscrew	8	Zinc Plated Steel
11	2	S070.006.170	Bushing, Intermediate (included in item #4)	2	Bronze
12	3	S095.073.001	Pilot Valve Assy	1	Conductive HDPE
13	3-A	S095.070.558	Valve Body	1	Conductive HDPE
14	3-B	S755.025.000	Sleeve (With O-Rings)	1	Bronze
15	3-C	S560.033.360	O-Ring (Sleeve)	4	Nitrile
16	3-D	S775.026.000	Spool (With O-Rings)	1	Stainless Steel
17	3-E	S560.023.360	O-Ring (Spool)	2	Nitrile
18	3-F	S675.037.080	Retaining Ring	1	Carbon Steel
19	4	S114.002.156	Intermediate (w/ aluminum center)	1	Aluminum
20	5	S115.020.080	Bracket, Leg	2	Carbon Steel
21	6	S115.021.080	Bracket, Leg	2	Carbon Steel
22	7	S132.002.360	Bumper, Diaphragm	2	Nitrile
23	8	S135.016.162	Bushing, Plunger	2	Brass
24	9	S170.012.330	Capscrew, Hx-Hd 1/2-13 x 1.00	8	Zinc Plated Steel
25	10	S170.023.330	Capscrew, Hx-Hd 7/16-14 x 1.75	4	Zinc Plated Steel
26	11	S170.024.330	Capscrew, Hx-Hd 7/16-14 x 1.00	8	Zinc Plated Steel
27	12	S170.045.330	Capscrew, Hx-Hd 5/16-18 x 1.25	4	Zinc Plated Steel
28	13	S170.066.330	Capscrew, Hx-Hd 1/2-13 x 2.25	36	Zinc Plated Steel
29	14	S172.001.330	Capscrew, Button-Hd Soc 1/2-13 x 1.50	12	Zinc Plated Steel
30	15	S196.003.155	Chamber, Inner - Includes #39	2	Aluminum
31	16	S196.004.155	Chamber, Outer - Includes #40, #46, #47	2	Aluminum
32	17	S286.018.360	Diaphragm - Buna	2	Nitrile
33	17	S286.018.364	Diaphragm - EPDM	2	EPDM
34	17	S286.018.365	Diaphragm - Neoprene	2	Neoprene
35	17	S286.018.354	Diaphragm - Santoprene	2	Santoprene
36	17	S286.018.356	Diaphragm - Hytrel	2	Hytrel
37	17	S286.018.357	Diaphragm - Polyurethane	2	Polyurethane
38	18	S312.015.155	Elbow, Suction	2	Aluminum
39	19	S312.016.155	Elbow, Discharge	2	Aluminum
40	20	S334.020.000	Flange, Follower	4	Carbon Steel
41	21	S338.008.360	Valve, Flap Assembly - Buna	4	Nitrile
42	21	S338.008.364	Valve, Flap Assembly - EPDM	4	EPDM
43	21	S338.008.365	Valve, Flap Assembly - Neoprene	4	Neoprene
44	21	S338.011.354	Valve, Flap Assembly - Santoprene	4	Santoprene
45	21	S338.011.356	Valve, Flap Assembly - Hytrel	4	Hytrel
46	21	S338.011.357	Valve, Flap Assembly - Polyurethane	4	Polyurethane
47	22	S360.013.379	Gasket, Flange - Conductive Nitrile	4	Conductive Nitrile
48	22	S360.013.384	Gasket, Flange - Conductive Neoprene	4	Conductive Neoprene
49	22	S360.013.385	Gasket, Flange - Conductive EPDM	4	Conductive EPDM
50	23	S360.014.379	Gasket, Flange - Conductive Nitrile	4	Conductive Nitrile
51	23	S360.014.384	Gasket, Flange - Conductive Neoprene	4	Conductive Neoprene
52	23	S360.014.385	Gasket, Flange - Conductive EPDM	4	Conductive EPDM

S/N	Item	Part Number	Description	Qty	Mtl
53	24	S360.021.360	Ring, Sealing	4	Nitrile
54	24	S360.021.364	Ring, Sealing	4	EPDM
55	24	S360.021.365	Ring, Sealing	4	Neoprene
56	25	S360.041.379	Gasket, Pilot Valve	1	Conductive Nitrile
57	26	S360.048.425	Gasket, Air Valve	1	Compressed Fibre
58	27	S518.014.156	Manifold	2	Aluminum
59	28	S530.033.000	Muffler, Metal	1	Carbon Steel
60	29	S545.007.330	Nut, Hex 7/16-14	20	Zinc Plated Steel
61	30	S545.008.330	Nut, Hex 1/2-13	24	Zinc Plated Steel
62	31	S547.002.110	Nut, Nylon Stop 1/4 x 20	8	Stainless Steel
63	32	S547.006.330	Nut, Stop - Diaphragm Rod	2	Zinc Plated Steel
64	33	S560.001.360	O-ring	2	Nitrile
65	34	S560.022.360	O-ring	2	Nitrile
66	35	S570.002.360	Pad, Hinge - Buna	4	Nitrile
67	35	S570.002.364	Pad, Hinge - EPDM (also used w/Santoprene)	4	EPDM
68	35	S570.002.365	Pad, Hinge - Neoprene (also used with Hytrel & Polyurethane)	4	Neoprene
69	36	S570.012.360	Pad, Wear - Buna	2	Nitrile
70	36	S570.012.364	Pad, Wear - EPDM	2	EPDM
71	36	S570.012.365	Pad, Wear - Neoprene	2	Neoprene
72	37	S612.014.000	Plate, Inner Diaphragm	2	Aluminum
73	38	S612.015.156	Plate, Outer Diaphragm	2	Aluminum
74	39	S618.003.330	Plug, Pipe 1/4" NPT	2	Zinc Plated Steel
75	40	S618.004.330	Plug, Pipe 3/8" NPT	2	Zinc Plated Steel
76	41	S620.011.114	Plunger, Actuator	2	Stainless Steel
77	42	S670.006.115	Retainer, Flap Valve	4	Stainless Steel
78	43	S685.008.120	Rod, Diaphragm	1	Stainless Steel
79	44	S720.004.360	Seal, U-Cup	2	Nitrile
80	45	S722.007.115	Seat, Flap Valve	4	Stainless Steel
81	46	S807.017.330	Stud, 7/16-14 x 2.25 (Included with item #16)	12	Zinc Plated Steel
82	47	S807.018.330	Stud, 7/16-14 x 3.00 (Included with item #16)	8	Zinc Plated Steel
83	48	S807.018.110	Stud, 1/4-20 (included with item #45)	8	Stainless Steel
84	49	S900.003.330	Washer, Lock 1/2"	8	Zinc Plated Steel
85	50	S900.006.330	Washer, Lock 7/16"	12	Zinc Plated Steel
86	51	S901.006.330	Washer, Flat 1/2"	12	Zinc Plated Steel
87	52	S901.011.180	Washer, Sealing Diaphragm Plate	12	Copper Alloy
88	53	S901.013.180	Washer, Sealing Diaphragm Rod	2	Copper Alloy
89	54	S901.023.330	Washer, Flat 3/4"	2	Zinc Plated Steel
90	HDF40-A Components Only				
91	55	S170.013.330	Capscrew, Hx-Hd 1/2-13 x 1.50	8	Zinc Plated Steel
92	56	S334.037.010	Flange, Adapter 4"	2	Cast Iron
93	57	S360.034.360	Gasket, Flange 3"	2	Nitrile
94	57	S360.034.364	Gasket, Flange 3"	2	EPDM
95	57	S360.034.365	Gasket, Flange 3"	2	Neoprene
96	58	S545.008.330	Nut, Hex 1/2-13	8	Zinc Plated Steel
97	59	S545.009.330	Nut, Hex 5/8-11	8	Zinc Plated Steel
98	60	S770.020.080	Spacer, Foot	4	Carbon Steel
99	61	S807.055.330	Stud, 5/8-11 x 2.50 (Included with item #56)	8	Zinc Plated Steel
100	62	S900.003.330	Washer, Lock 1/2"	8	Zinc Plated Steel
101	63	S900.007.330	Washer, Lock 5/8"	8	Zinc Plated Steel
102	64	S901.006.330	Washer, Flat 1/2"	8	Zinc Plated Steel